





**Wyrte DBV Panel
assembly**


- 1. Staple the corners using 1” stainless steel staples.**

Keep the staples away from the outer 1/2" of the panel where the reveals will be.

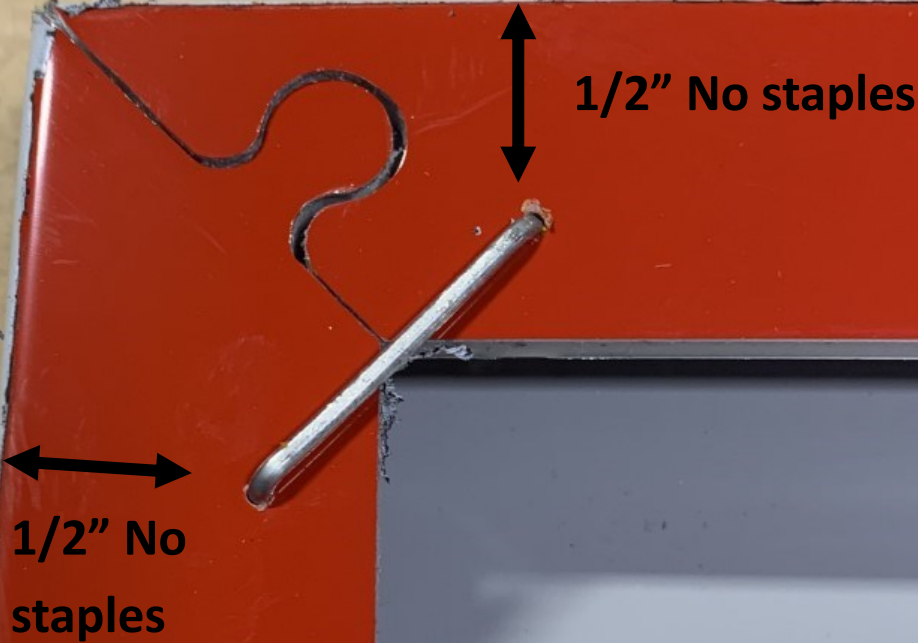

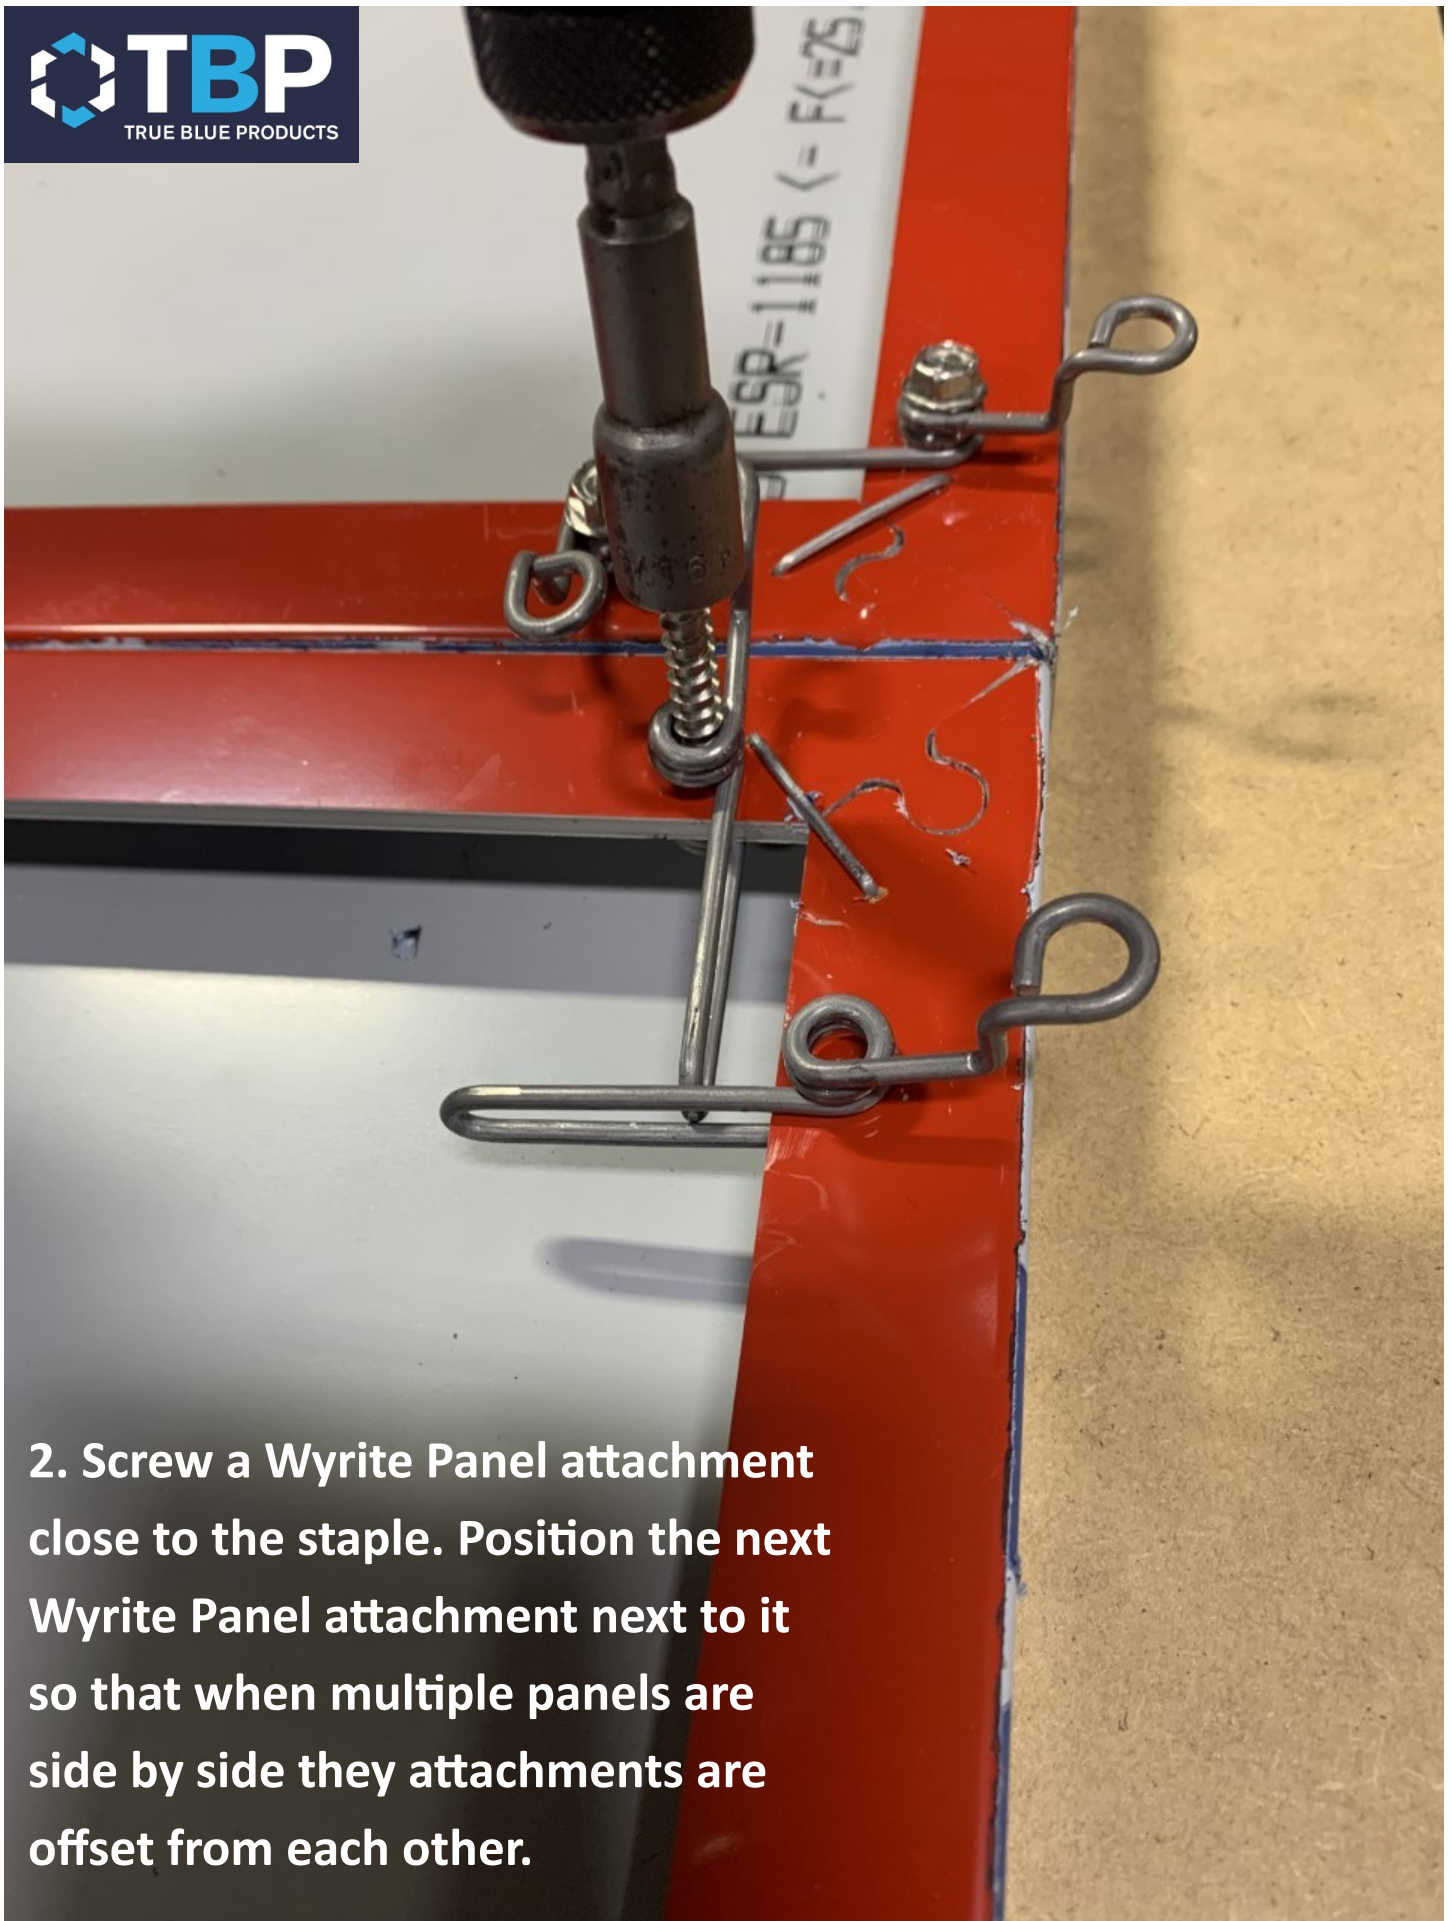

2. Screw a Wyrte Panel attachment close to the staple. Position the next Wyrte Panel attachment next to it so that when multiple panels are side by side they attachments are offset from each other.

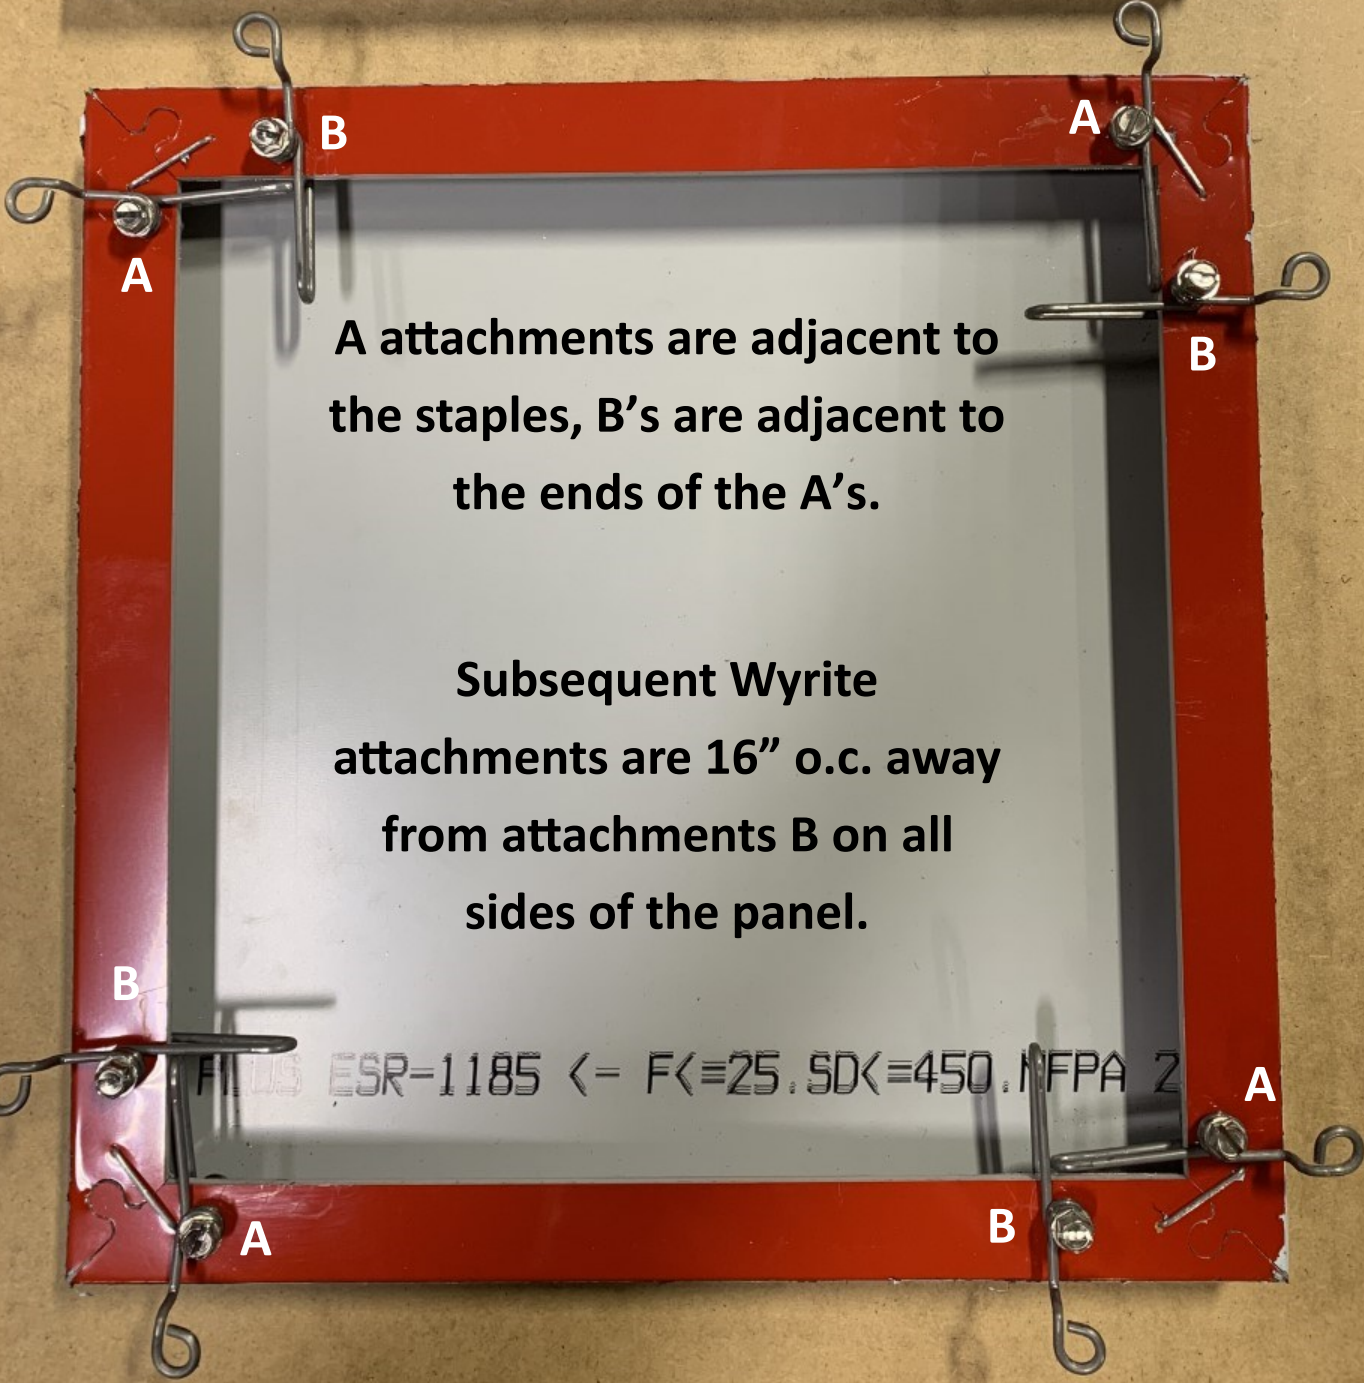

A attachments are adjacent to the staples, B's are adjacent to the ends of the A's.

Subsequent Wryrite attachments are 16" o.c. away from attachments B on all sides of the panel.

FILED ESR-1185 <= F<=25.SDK=450.NFPA 2

**Wwrite Panel attachments
are offset and will not
contact each other panel
to panel.**



Wryrite Panel attachments are then fastened on the top and bottom of the panel to horizontal girts, or on the left and right sides to vertical girts, fastened perpendicular to stiffeners (along the long sides of the panels). The attachments on the sides that are not fastened utilize the Wryrite attachments only to support reveals. Outside corners on buildings may require all 4 sides to be fastened to account for wind wrap.

Easy to make reveal widths wider from panel to panel.

